



SNAPSPORTS®
ATHLETIC SURFACES

INSTALLATION GUIDE

Multi-Sport Adjustable Net System

Welcome to our winning team!

You have purchased a top-of-the-line multi-sport adjustable net system from SnapSports®. This system has been built to the highest quality standards in order to provide your family with many years of athletic enjoyment.

Installation

Review all instructions prior to assembly to familiarize yourself with the entire installation process. **If you have any concerns regarding your ability to install this access gate system safely, please call your SnapSports dealer to employ a qualified technician to complete the installation.**


Refer to the **Assembly Setup** illustration on Page 4 for help.

Parts Included:


Basketball/Net Pole Hardware



Winch and Hardware

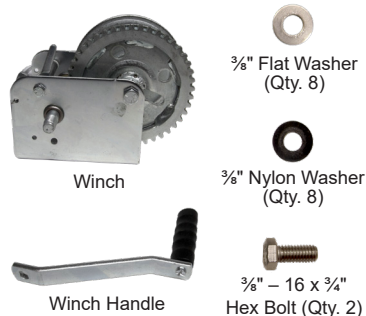

Foot Peg and Hardware

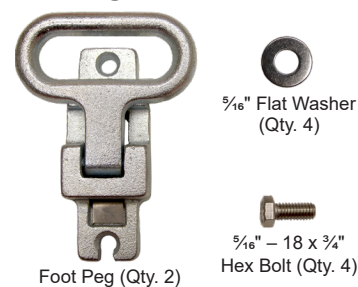

Net Pole Hardware (Winch Side)



Net Positioning Hardware



*Parts shown are not to scale.

Part 1: Fixed Pole Side

1. Assemble the four (4) J-Bolt assemblies by securing a $\frac{3}{8}$ "-16 nut on each of the J-Bolts. Add a metal washer and nylon washer to each of the assemblies.
2. Insert the four (4) J-Bolt Assemblies, such that the hooks open on the topside, to the DuraSlam basketball pole in the four (4) holes on the front side of the pole. If the court is utilizing two net poles for the net system, then insert the J-Bolt assemblies on the pole that is furthest from the court access. Secure the J-Bolt assemblies with the $\frac{9}{16}$ " end wrench.

Note: Each net/light pole will have an additional hole at 39". This hole is used to attach the winch on the opposing pole, **not the J-bolt side**. For this end, insert a plastic hole plug from the Light/Net Pole Hardware Pack. This will prevent water from entering the pole.

Part 2: Adjustable Pole Side

1. For each of the Pulley Assemblies, add one flat metal washer and nylon washer. Each assembly should already have the $\frac{3}{8}$ " nut attached. The pulley after tightened down should be facing to the right of the pole.
2. On the opposing pole from the J-Bolt side, insert the three (3) Pulley Assemblies at the 62", 88" and the 96" locations on the front side of the pole. Tighten assemblies to the pole with a $\frac{9}{16}$ " end wrench.
3. Secure the winch to the pole at the 36" and 39" locations with the $\frac{3}{8}$ "-16 x $\frac{3}{4}$ " nuts and flat metal washers. Tighten using the $\frac{9}{16}$ " end wrench and/or $\frac{9}{16}$ " socket.
4. Attach the enclosed $\frac{1}{4}$ " rope and spring clamp assemble to the winch system. Refer to the enclosed winch net attachment instruction for details. Wind the net up over the highest pulley assembly and allow at least 12" of rope between the spring clip and the pulley assembly.
5. Attach the foot peg to the back side of the pole with the $\frac{5}{16}$ " – 18 x $\frac{3}{4}$ " bolts and washers. Secure with the $\frac{1}{2}$ " end wrench or $\frac{1}{2}$ " socket.

Part 3: Game Net Installation and Positioning

Note: All Game Nets are sold separately.

1. Attach one end of the game net cable to the J-Bolt at 62", or Badminton height on the net/light/basketball pole. Attach the other end to the snap clip that is hooked to the rope on the opposing pole.
2. Center the net over the court in the location of the game lines on the court. It may be necessary to cut the net cable in order to center the net and attach the net to the black rope. Cut the cable with cable cutters and make a new loop at the end with the enclosed aluminum swedge lock. With a hammer or crimper, secure the swedge lock.
3. Now that the net is centered, secure the net with the enclosed cable clamps to keep the net from sliding on the net cable. Tighten the clamp with a Phillips head screwdriver when in position.
4. You can loosen the winch and lower the net to the 36" position to attach the lower net positioning ropes.

Part 4: Lower Net Positioning Rope Lock Installation

Note: You can use either the enclosed Bungee Cords to attach the bottom corners of the net or the enclosed $\frac{1}{4}$ " Rope Locks.

1. Attach the quick clip to the bottom hole of the game net. Attach the net adjuster assembly to the quick clip.
2. Attach the loose quick clip to the bottom hole of the net pole/basketball system. Attach the loose end of the adjustment assembly to the quick clip on the net pole/basketball system.
3. Pull the loose end of the Rope Lock to tighten and center the bottom side of the net.
4. Leave 2 to 3 feet of excess rope and trim remainder off with a knife or scissors. Burn the ends of the rope with a lighter to prevent the ends from fraying.

To move or remove the net: Unlock by pushing the button on the Rope Lock.

- Complete Part 4: Step 1 for the opposing net/light pole.

Raising and Lowering Your SnapSports Multi-Net System

- To raise or lower game net, loosen the winch and lower net positioning ropes. Attach the end of the net of the J-Bolt at the height that you desire.
- Place the black rope over the pulley at the same corresponding height.
- Tighten the winch until the net is taut.
- Attach the lower positioning ropes to the 36" J-bolt and corresponding pulley for men's and women's volleyball heights and attach to the lower mount for tennis and badminton play.

Your SnapSports® Multi-Net Adjustment System is now ready for use!

Please remember that this system is designed to withstand many years of aggressive play, but it is not intended to support players who hang on the game nets. **Failure to keep players off of the net will result in voiding all manufacturer's warranties.**

Thank you for choosing SnapSports products.

If you would like to purchase accessories, contact your local SnapSports dealer or visit us online at snapsports.com.

Assembly Setup

