

PLAYSAFER TILES


INSTALLATION GUIDE

SITE PREP

- INSTALL 2"-3" OF COMPACTED AND LEVELED CRUSHED STONE
- PLACE LANDSCAPE FABRIC ON TOP OF STONE BASE

1

INSTALL THE FIRST ROW OF
TILES ALONG THE LONGEST
STRAIGHT EDGE OF THE AREA.

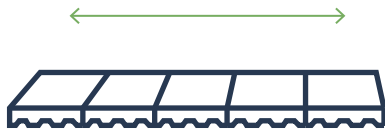


2

APPLY A LAYER OF GLUE ONLY ON
THE LOWER HALF OF THE SEAM.
THIS WILL PREVENT GLUE FROM
STAINING THE SURFACE.




3

INSERT CONNECTOR PINS.

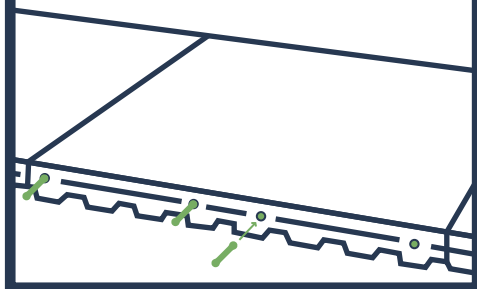

4

PRESS TILES
TIGHTLY TOGETHER.

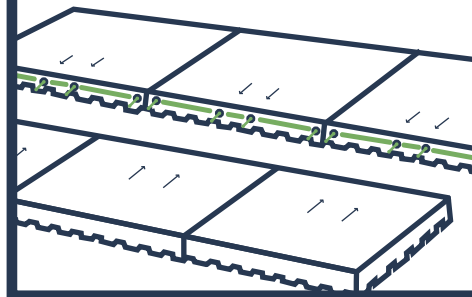

Watch our installation video guide www.rubbermulch.com/pages/tile_installation

PLAYSAFER TILE EDGE PIECES INSTALLATION GUIDE


SITE
PREP

•INSTALL THE TILES

Glue should only be applied if temperature will remain at over 50 ° F for at least 24 hours.


1

INSTALL EDGE PIECE
ON THE FIRST CORNER
EXTENDING PAST THE CORNER.

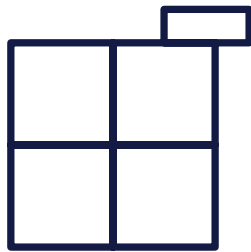


2

CUT THE CORNER PIECE
ON A 45° ANGLE.

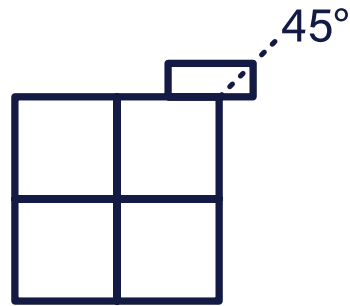

3

CUT CONNECTING CORNER PIECE
AT A MIRRORED 45 DEGREE ANGLE.

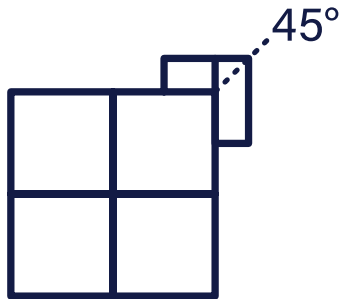

4

CONTINUE EDGE PIECES
IN A STAGGERED PATTERN.

